


# KDOT TEMPORARY EROSION-CONTROL MANUAL



PB98-149545

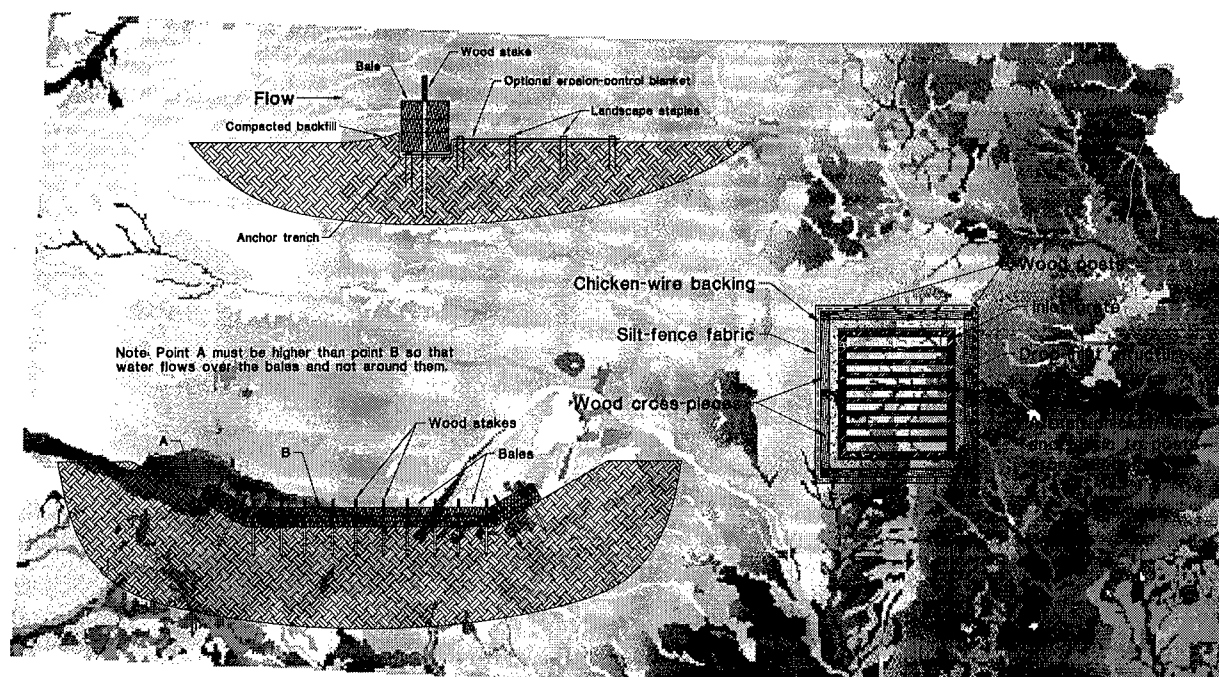

## A Guide for the Design, Installation, Inspection, and Maintenance of Temporary Erosion-Control Measures in Kansas

December 1997



# ➤ PURPOSE & USE OF THE MANUAL

---

## PURPOSE

Erosion control is becoming an increasingly large part of highway design and construction. KDOT must comply with current federal and state erosion-control requirements and prepare to meet even more stringent requirements in the future. The development and implementation of an effective stormwater pollution prevention plan (SWPPP) is essential.

This manual is intended to give designers, contractors, installers, and inspectors the tools they need to implement practical and efficient SWPPPs. Each chapter of this manual includes sections on design, installation, inspection and maintenance for temporary erosion-control measures (TECMs). Proper use of these devices will protect the environment while saving the user time and money.

## USE

The format of this manual facilitates its use. The TECM selection process has been streamlined through the use of flowcharts. The user identifies an erosion or sedimentation condition (ditch, slope, and inlet) and then answers site-specific questions along the flowchart paths. When the end of a path is reached, TECM selection is complete. The user is then directed to specific pages in the manual. Each TECM description contains information on design, placement, material specification, installation, inspection, and maintenance. No design calculations are needed—all design data is in tabular form. If the user needs more information than is contained in this manual, a list of additional erosion-control resources is included at the end of this manual.

## ☛ TABLE OF CONTENTS

---

☛ NPDES PERMITS .....	3
☛ DESIGN OBJECTIVES .....	4
☛ SELECTION FLOWCHART .....	5
☛ SECTION 1 Bale Ditch Checks.....	6
☛ SECTION 2 Silt-Fence Ditch Checks .....	10
☛ SECTION 3 Triangular Silt Dike™ Ditch Checks .....	14
☛ SECTION 4 Rock Ditch Checks.....	17
☛ SECTION 5 Bale Slope Barriers .....	20
☛ SECTION 6 Silt-Fence Slope Barriers.....	23
☛ SECTION 7 Bale Drop-Inlet Barriers.....	26
☛ SECTION 8 Silt-Fence Drop-Inlet Barriers .....	29
☛ SECTION 9 Triangular Silt Dike™ Drop-Inlet Barriers.....	33
☛ SECTION 10 Temporary Erosion-Control Blankets.....	36
☛ SECTION 11 Temporary Seeding.....	37
☛ ADDITIONAL RESOURCES .....	38

## NPDES PERMITS

---

In an effort to limit the pollution of our nation's many streams, rivers, and lakes, the Environmental Protection Agency (EPA), directed by Congress, enacted Section 402 of the Clean Water Act. Section 402 established the National Pollutant Discharge Elimination System (NPDES) to regulate the discharge of pollutants from point sources. In 1990, the EPA published further regulations under the NPDES program which defined the term "storm water discharge associated with industrial activity" to include storm water discharges from construction activities (clearing, grading, excavation, etc.) that disturb two or more hectares of total land area. The EPA granted the responsibility of administering and enforcing NPDES permitting to the states. In May of 1996, the EPA approved the Kansas Department of Health and Environment's (KDHE) NPDES Draft for Construction Activity permits in Kansas.

An NPDES Permit authorizes a site owner to discharge storm water runoff. KDHE administers two types of NPDES permits: general and individual. To apply for a general permit, a site owner (in this case, the Kansas Department of Transportation) must file a Notice of Intent (NOI). The NOI application requires basic information about the site's location, existing condition, future use, and storm water pollution control measures. The general permit will apply to most projects. An individual permit is only required when certain pre-existing site conditions are encountered. These conditions concern proximity to one or more of the following: Indian Lands, contaminated soils, drinking water intakes, historical or archeological sites, and threatened or endangered species. Sites within one-half mile of a Critical Water Quality Management Area, Special Aquatic Life Use Waters, or an Outstanding Water Quality Management Area are also included. If any one of these site conditions is met, KDHE will investigate potential impacts and determine whether coverage under an individual permit is needed—coverage under a general permit is still a possibility.

The core of the storm water permit process is the Storm Water Pollution Prevention Plan (SWPPP). An SWPPP is a listing of all planned erosion and sediment control practices on site. The SWPPP also addresses inspection and maintenance procedures. The SWPPP is not a required attachment to the NOI—however, it is necessary to have a copy of the SWPPP on site at all times. Currently, the KDOT Environmental Services Section files the NOI for most projects (with the exception of inter-local projects). In addition to the NOI, the general contractor must complete and sign the Contractor's Certification Form. By signing this form, the contractor signifies that he understands the terms and conditions of the NPDES General Permit. This form should be kept on site with the SWPPP. KDOT has developed a standard SWPPP for all its projects. This SWPPP includes special provisions, standard drawings and specifications, inspection and maintenance report forms, the contractor's site-specific erosion-control schedule, the KDOT erosion-control policy statement, and a memorandum for design and field engineers.

Upon completion of the project and stabilization of the disturbed area, the owner files the Notice of Termination (NOT). A disturbed area is considered stabilized when vegetation has been established on 70% of the area. Filing the NOT signifies that coverage under the NPDES General permit is no longer needed.

If further information is needed, consult the KDHE National Pollutant Discharge Elimination System Stormwater Discharge Permit Information Packet.

## ➤ DESIGN OBJECTIVES

---


When developing a temporary erosion-control plan at your site, you should decide which of the following three design objectives is most feasible for your site:

- **Keep the soil *at* its original location.**
- **Keep the soil *close* to its original location.**
- **Keep the soil *on site*.**

Keeping the soil at its original location is the preferred objective. This option causes the least amount of harm to the environment. Not only does this option protect the surrounding land and water, but it also prevents costly regrading and redressing of slopes and ditches. However, keeping the soil at its original location is not always feasible due to challenging topography and other site variables. If you can't keep the soil at its original location, at least try to keep it close. This option will require some regrading and redressing of slopes and ditches. Finally, if site conditions are such that neither of the first two objectives can be met, at least try to keep the soil from leaving the site. Soil transported off-site can cause far-reaching damage to the downstream environment. Loss of soil from the site should be avoided to the extent practicable.

## SELECTION FLOWCHARTS

The following flowcharts provide general guidance for the selection of the most appropriate temporary erosion-control measures. The flowchart paths are generalized and do not represent every condition that may be encountered in the field. The selection of temporary erosion-control measures for some situations must be based on good judgement and past experience under similar conditions.

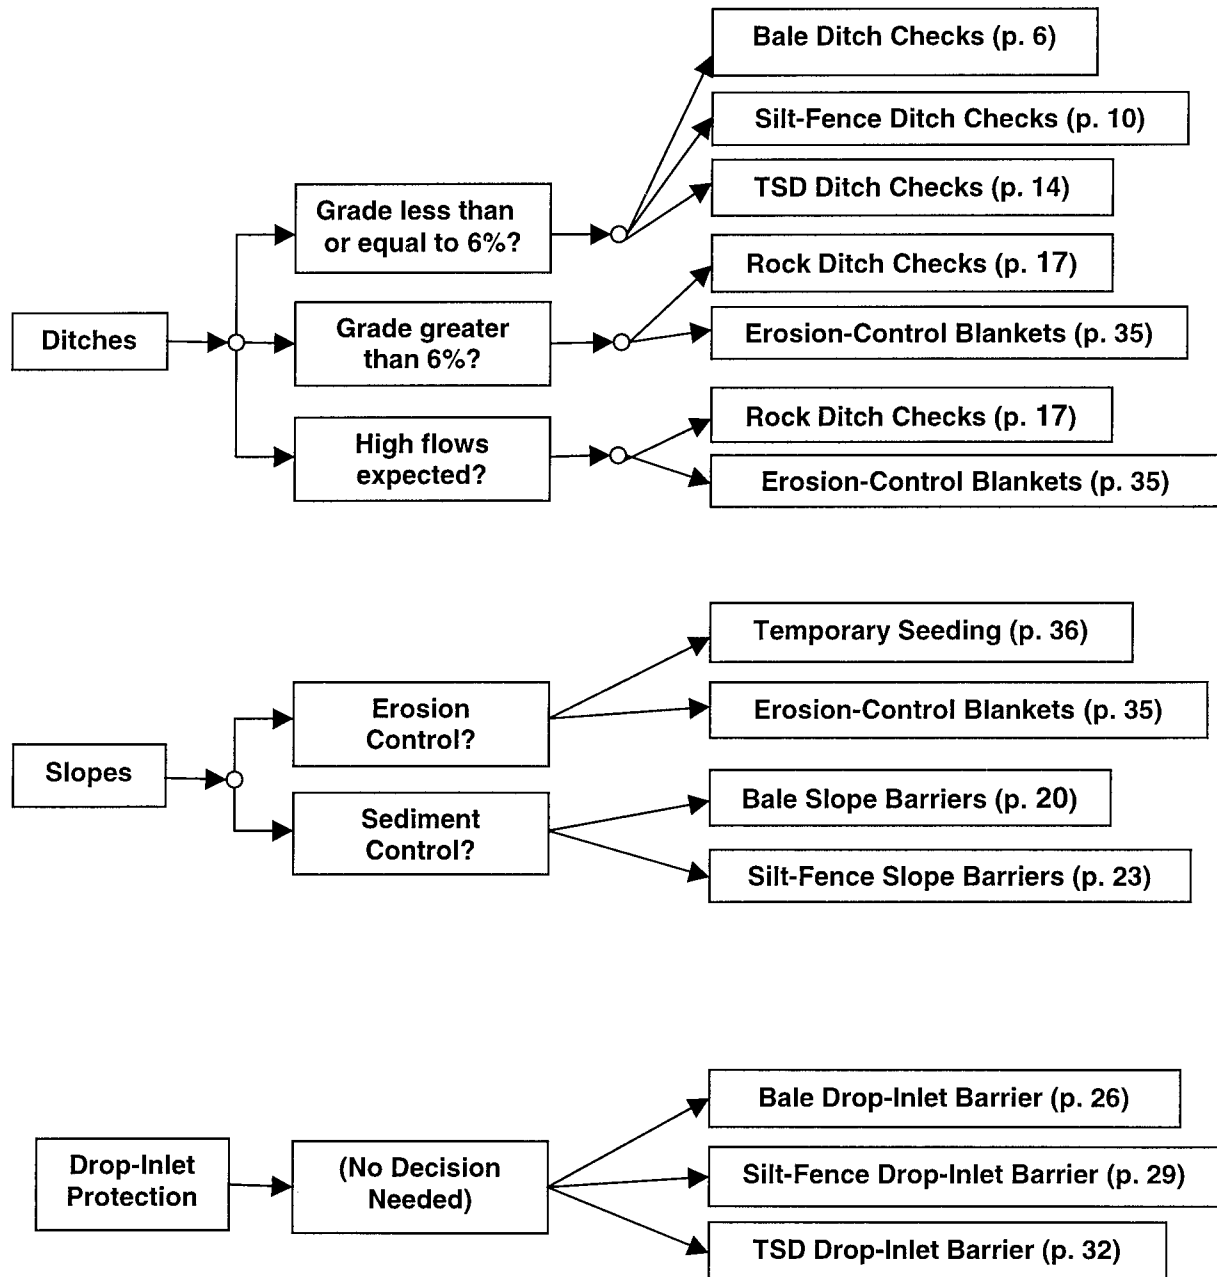

## PURPOSE & OPERATION

Bale ditch checks operate by intercepting and ponding sediment-laden runoff. Ponding the water reduces the velocity of the incoming flow and allows most of the suspended sediment to settle out. Water exits the check by flowing over the top. For ditches with steeper slopes and/or higher flows, an erosion-control blanket on the downstream side of the ditch check can serve as a scour apron that helps prevent more erosion from this flowing water.

## DESIGN

### *Material Specification*

- Bale ditch-checks may be constructed of wheat straw, oat straw, prairie hay, or brome grass hay that is free of weeds declared noxious by the Kansas State Board of Agriculture.
- The stakes used to anchor the bales should be a hardwood material with the following minimum dimensions: 50 millimeters square (nominal) by 1.2 meters long.
- Twine should be used to bind bales. The use of wire binding is prohibited because it does not biodegrade readily.
- **Optional:** The downstream scour apron should be constructed of a double-netted straw erosion-control blanket at least 1.8 meters wide.
- **Optional:** The metal landscape staples used to anchor the erosion-control blanket should be at least 200 millimeters long.

### *Placement*

- Bale ditch checks should be placed **perpendicular** to the flowline of the ditch.
- The ditch check should extend far enough so that the ground level at the ends of the check is higher than the top of the lowest center bale. This prevents water from flowing around the check.
- Checks should not be placed in ditches where high flows are expected. Rock checks should be used instead.
- Bales should be placed in ditches with slopes of 6% or less. For slopes steeper than 6%, rock checks should be used.




The following table provides check spacing for a given ditch grade:

Ditch Check Spacing	
<i>Ditch grade (%)</i>	<i>Check Spacing (meters)</i>
1.0	61
2.0	30
3.0	20
4.0	15
5.0	12
6.0	10

## INSTALLATION


### *Proper installation method*

- Excavate a trench perpendicular to the ditch flowline that is 150 millimeters deep and a bale's width wide. Extend the trench in a straight line along the entire length of the proposed ditch check. Place the soil on the upstream side of the trench—it will be used later.
- **Optional:** On the downstream side of the trench, roll out a length of erosion-control blanket (scour apron) equal to the length of the trench. Place the upstream edge of the erosion-control blanket along the bottom upstream edge of the trench. The erosion-control blanket should be anchored in the trench with one row of 200-millimeter landscape staples placed on 460-millimeter centers. The remainder of the erosion-control blanket (the portion that is not lying in the trench) will serve as the downstream scour apron. This section of the blanket should be anchored to the ground with 200-millimeter landscape staples placed around the perimeter of the blanket on 460-millimeter centers. The remainder of the blanket should be anchored using two evenly spaced rows of 200-millimeter landscape staples on 460-millimeter centers placed perpendicular to the flowline of the ditch.
- Place the bales in the trench, making sure that they are butted tightly. Two stakes should be driven through each bale along the centerline of the ditch check, approximately 150 to 200 millimeters in from the bale ends. Stakes should be driven **at least** 460 millimeters into the ground.
- Once all the bales have been installed and anchored, place the excavated soil against the upstream side of the check and compact it. The compacted soil should be no more than 75 to 100 millimeters deep and extend upstream no more than 600 millimeters.

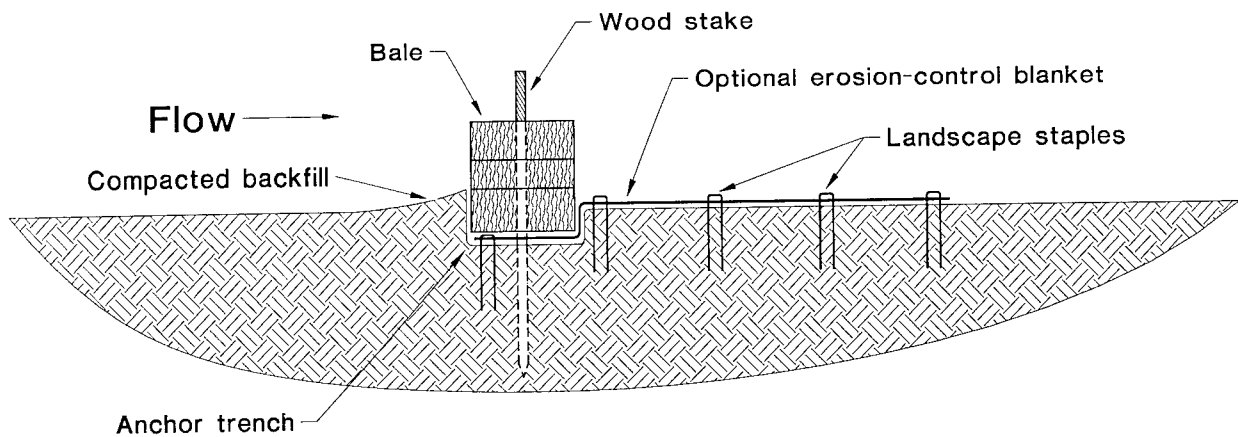

**Figure 1-1: Detail of bale ditch check installation**

Note: Point A must be higher than point B so that water flows over the bales and not around them.

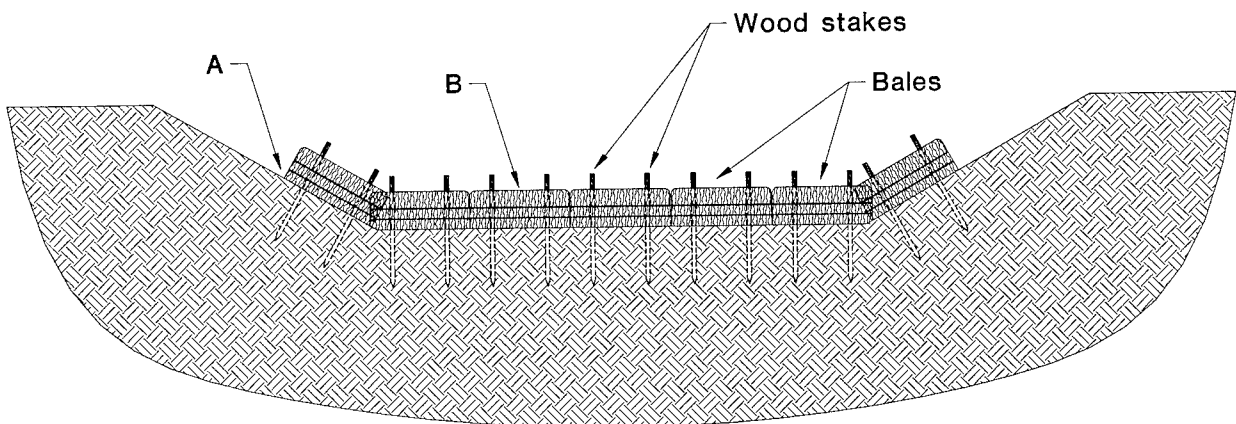

**Figure 1-2: Installation of bale ditch checks**

***List of common placement/installation mistakes to avoid***

- Do not place a bale ditch check directly in front of a culvert outlet. It will not stand up to the concentrated flow.
- Do not place bale ditch checks in ditches that will likely experience high flows. They will not stand up to concentrated flow.
- Follow prescribed ditch-check spacing guidelines. If spacing guidelines are exceeded, erosion will occur between the ditch checks.
- Do not allow water to flow around the ditch check. Make sure that the ditch check is long enough so that the ground level at the ends of the check is higher than the top of the lowest center bale.
- Do not place bale ditch checks in channels with shallow soils underlain by rock. If the check is not anchored sufficiently, it will wash out.
- Bale ditch checks must be dug into the ground. Bales at ground level do not work because they allow water to flow under the check.

## INSPECTION & MAINTENANCE

Bale ditch checks should be inspected every 7 days and within 24 hours of a rainfall of 10 millimeters or more. The following is a list of questions that should be addressed during each inspection:

- ***Does water flow around the ditch check?***  
This is usually caused by insufficient ditch check length. If this occurs, extend the check far enough so that the ground level at the ends of the check is higher than the top of the lowest center bale.
- ***Does water flow under the ditch check?***  
This is usually caused by not trenching in the bales deep enough (at least 150 millimeters) or insufficient compaction of soil upstream of the check. If the problem is insufficient compaction, add more soil directly upstream of the check and recompact. If the problem is improperly trenched bales, the entire check should be removed and a new one installed using the proper trench depth.
- ***Does water flow through spaces between abutting bales?***  
This is usually caused by not butting the bales tight enough during initial installation. Stuffing loose bale material between the bales to fill up the space can usually solve this problem.
- ***Are any bales and/or scour aprons (optional) dislodged?***  
Check to see if any bales or scour aprons have become dislodged from their original position. Dislodged bales and scour aprons should be repositioned and restaked if they are still reusable—otherwise, replace them.
- ***Are bales decomposing due to age and/or water damage?***  
Under normal conditions, the maximum useful life of a bale is normally 3 months (but may be longer during prolonged dry periods). Inspect the bales for signs of decomposition and replace as necessary.
- ***Does sediment need to be removed from behind the ditch check?***  
Sediment accumulated behind the ditch check should be removed when it reaches one-half of the original exposed height of the bales. Allowing too much sediment to accumulate behind a ditch check drastically reduces its effectiveness. One high-intensity rainfall can dislodge enough sediment from surrounding slopes to completely fill the space behind the ditch check. This is why it is extremely important to inspect ditch checks within 24 hours of a large rainfall.

When removing sediment from behind a bale ditch check with a bulldozer or backhoe, take care not to undermine the entrenched bales. ☑

### PURPOSE & OPERATION

Silt-fence ditch checks operate by intercepting, ponding, and filtering sediment-laden runoff. Ponding the water reduces the velocity of the incoming flow and allows most of the suspended sediment to settle out. As the ponded water percolates through the silt-fence fabric, much of the remaining suspended sediment is filtered out. Silt-fence ditch checks work well in ditches with low flows and moderate slopes.

### DESIGN

#### *Material Specification*

- Silt-fence fabric should conform to the AASHTO M288 96 silt fence specification.
- The posts used to support the silt-fence fabric should be a hardwood material with the following minimum dimensions: 50 millimeters square (nominal) by 1.2 meters long.
- Silt-fence fabric should be attached to the wooden posts with staples, wire, zip ties, or nails.

#### *Placement*

- Place silt-fence in ditches where it is unlikely that it will be overtopped. Water should flow through a silt-fence ditch check, not over it. Silt-fence ditch checks often fail when overtopped.
- Silt-fence ditch checks should be placed **perpendicular** to the flowline of the ditch.
- The silt fence should extend far enough so that the ground level at the ends of the fence is higher than the top of the low point of the fence. This prevents water from flowing around the check.
- Checks should not be placed in ditches where high flows are expected. Rock checks should be used instead.
- Silt fence should be placed in ditches with slopes of 6% or less. For slopes steeper than 6%, rock checks should be used.


The following table provides check spacing for a given ditch grade:

Ditch Check Spacing	
<i>Ditch grade (%)</i>	<i>Check Spacing (meters)</i>
1.0	61
2.0	30
3.0	20
4.0	15
5.0	12
6.0	10

## INSTALLATION


### *Proper installation method*

- Excavate a trench perpendicular to the ditch flowline that is **at least** 150 millimeters deep by 100 millimeters wide. Extend the trench in a straight line along the entire length of the proposed ditch check. Place the soil on the upstream side of the trench for later use.
- Roll out a continuous length of silt-fence fabric on the downstream side of the trench. Place the edge of the fabric in the trench starting at the top upstream edge of the trench. Line all three sides of the trench with the fabric. Backfill over the fabric in the trench with the excavated soil and compact. After filling the trench, approximately 600 to 900 millimeters of silt-fence fabric should remain exposed.
- Lay the exposed silt fence on the upstream side of the trench to clear an area for driving in the posts. Just downstream of the trench, drive posts into the ground to a depth of at least 600 millimeters. Place posts no more than 1.2 meters apart.
- Attach the silt fence to the anchored post with staples, wire, zip ties, or nails.

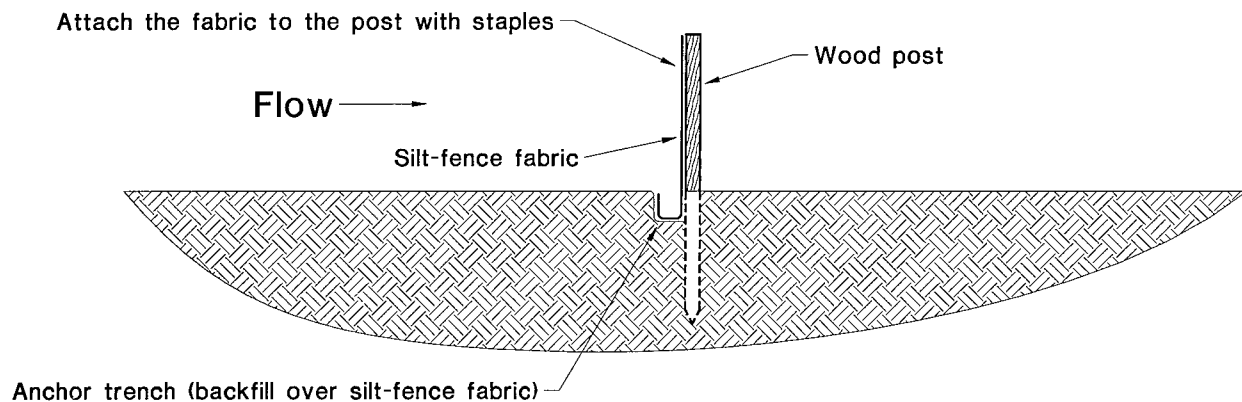

**Figure 2-1: Detail of silt-fence ditch check installation**

Note: Point A must be higher than point B so that water will not flow around the silt-fence ditch check.

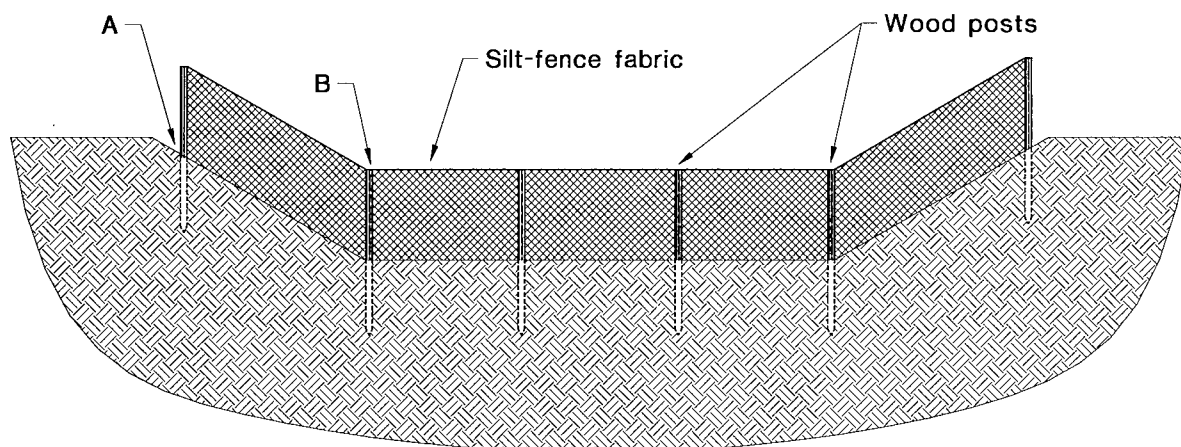

**Figure 2-2: Installation of silt-fence ditch checks**

### ***List of common placement/installation mistakes to avoid***

- Water should flow through a silt-fence ditch check—not over it. Place silt fence in ditches where it is unlikely that it will be overtopped. Silt-fence installations quickly deteriorate when water overtops them.
- Do not place silt-fence posts on the upstream side of the silt-fence fabric. In this configuration, the force of the water is not restricted by the posts, but only by the staples (wire, zip ties, nails, etc.). The silt fence will rip and fail.
- Do not place a silt-fence ditch check directly in front of a culvert outlet. It will not stand up to the concentrated flow.
- Do not place silt-fence ditch checks in ditches that will likely experience high flows. They will not stand up to concentrated flow.
- Follow prescribed ditch-check spacing guidelines. If spacing guidelines are exceeded, erosion will occur between the ditch checks.
- Do not allow water to flow around the ditch check. Make sure that the ditch check is long enough so that the ground level at the ends of the fence is higher than the low point on the top of the fence.
- Do not place silt-fence ditch checks in channels with shallow soils underlain by rock. If the check is not anchored sufficiently, it will wash out.

## **INSPECTION & MAINTENANCE**

Silt-fence ditch checks should be inspected every 7 days and within 24 hours of a rainfall of 10 millimeters or more. The following is a list of questions that should be addressed during each inspection:

- ***Does water flow around the ditch check?***  
This is usually caused by insufficient ditch-check length. If this occurs, lengthen the check so that the ground level at the ends of the fence is higher than the low point on the **top** of the fence.
- ***Does water flow under the ditch check?***  
This can be caused by posts that are too far apart, a trench that is too shallow, or an improper burial procedure. Posts should be no more than 1.2 meters apart. The trench should be at least 100 millimeters wide by 150 millimeters deep. The bottom edge of the silt fence should be anchored securely by backfilling over the fabric in the trench with the excavated soil and then compacting. If these guidelines have not been met, the silt-fence ditch check should be re-installed or the deficiencies should be remedied.
- ***Does the silt fence sag excessively?***  
Sagging silt fence is caused by excessive post spacing and/or overtopping of the silt fence. Silt-fence posts should be no more than 1.2 meters apart. If the post spacing exceeds 1.2 meters, additional posts should be added to decrease spacing between posts. Water should flow through a silt-fence ditch check—not over it. Silt-fence installations deteriorate quickly when water overtops them. If a silt-fence ditch check is regularly overtopped, it has probably been placed in a location that receives flows beyond its intended capacity. In this case, discontinue the use of silt fence in this area and try something different (e.g.—bale ditch checks, TSDs, rock checks).

- ***Has the silt fence torn or become detached from the posts?***

Silt-fence can be torn by the force of ponded water, or by winds that rip the silt-fence fabric away from the posts. If a silt fence develops tears for any reason, it should be replaced.

- ***Does sediment need to be removed from behind the ditch check?***

Sediment accumulated behind the ditch check should be removed when it reaches one-half of the original exposed height of the silt fence. Allowing too much sediment to accumulate behind a ditch check drastically reduces its effectiveness. One high-intensity rainfall can dislodge enough sediment from surrounding slopes to completely fill the space behind the ditch check. This is why it is extremely important to inspect ditch checks within 24 hours of a large rainfall.

When removing sediment from behind a silt-fence ditch check with a bulldozer or backhoe, take care not to undermine the entrenched silt fence. ☑

## SECTION 3

## Triangular Silt Dike™ Ditch Checks

### PURPOSE & OPERATION

Triangular silt dikes (TSDs) work on the same principle as bale ditch checks: they intercept and pond sediment-laden runoff. Ponding the water reduces the velocity of any incoming flow and allows most of the suspended sediment to settle out. Water exits the TSD by flowing over the top. The geotextile apron on the downstream side of the dike helps prevent scour caused by this flowing water. Because TSD installations require a minimal depth for anchoring, they are well suited to ditches with shallow soils underlain by rock.

### DESIGN

#### *Material Specification*

- Triangular Silt Dikes™
- The metal landscape staples used to anchor the TSDs should be at least 150 millimeters to 200 millimeters long.

#### *Placement*

- TSDs should be placed **perpendicular** to the flowline of the ditch.
- The TSDs should extend far enough so that the bottoms of the end dikes are higher than the top of the lowest center dike. This prevents water from flowing around the TSD.
- TSDs should not be placed in ditches where high flows are expected. Rock checks should be used instead.
- TSDs should be placed in ditches with a slope of 6% or less. For slopes steeper than 6%, rock checks should be used.

The following table provides check spacing for a given ditch grade:

Ditch Check Spacing	
<i>Ditch grade (%)</i>	<i>Check Spacing (meters)</i>
1.0	61
2.0	30
3.0	20
4.0	15
5.0	12
6.0	10


### INSTALLATION

#### *Proper installation method*

- Excavate a trench perpendicular to the ditch flowline that is at least 100 millimeters deep by 100 millimeters wide. Extend the trench in a straight line along the entire length of the proposed TSD installation. Place the soil on the upstream side of the trench for later use.




- Each TSD has two aprons: one upstream and one downstream. The upstream apron is the shorter of the two. Place one TSD on the downstream side of the trench. Conform the flexible TSD to the geometry of the ditch so that no space exists between the dike and the ditch bottom. Place the first 100 to 150 millimeters of the upstream apron in the trench and anchor it with one row of 150-millimeter to 200-millimeter landscape staples on 460-millimeter centers. Place an additional row of 150-millimeter to 200-millimeter landscape staples on 460-millimeter centers along the seam on the upstream side of the TSD. The downstream apron (which folds under the base of TSD) should terminate freely on the downstream side of the TSD. No trench is needed to anchor the downstream apron. This apron should be anchored with two rows of 150 to 200-millimeter landscape staples placed on 460-millimeter centers. One row should be placed where the downstream apron meets the base of the dike, and the other row should be placed at the downstream edge of the apron.
- Each TSD has an open sleeve at either end. Connect adjoining dikes with these sleeves and then **repeat the anchoring procedure in the previous step**.
- Once all the TSDs have been joined and anchored, fill in the upstream trench with soil and compact it.

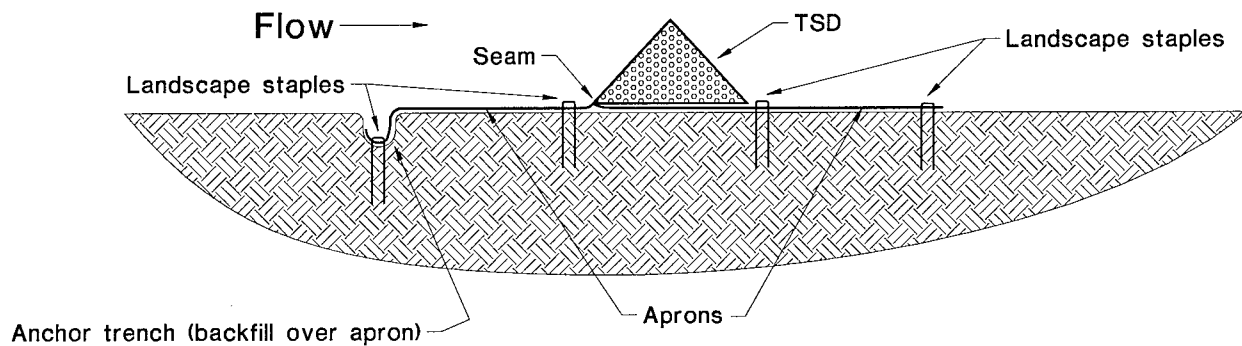

**Figure 3-1: Detail of TSD ditch check installation**

Note: Point A must be higher than point B so that water flows over the TSDs and not around them.

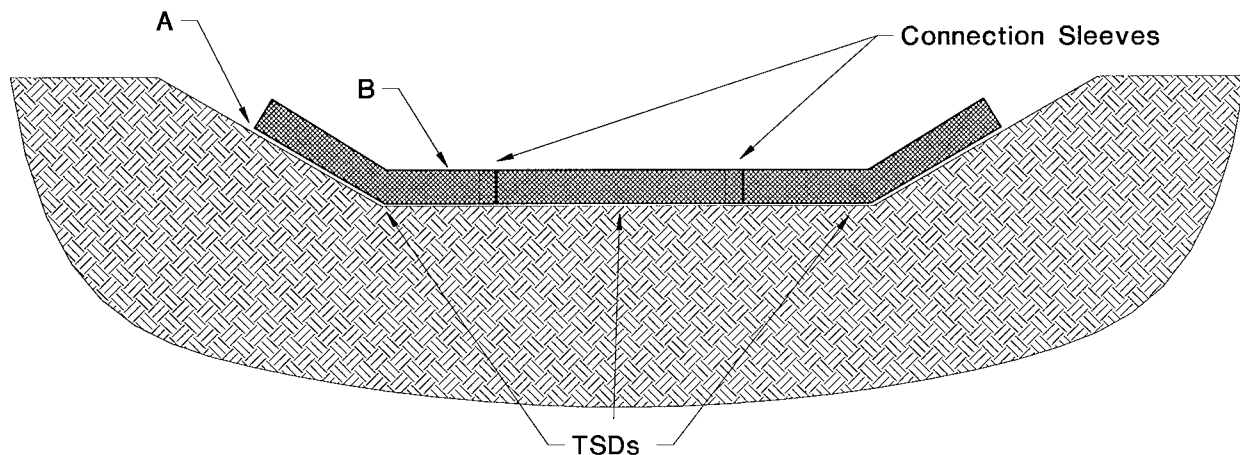

**Figure 3-2: Installation of TSD ditch checks**

### ***List of common placement/installation mistakes to avoid***

- Do not place TSDs directly in front of a culvert outlet. They will not stand up to the concentrated flow.
- The upstream apron of the TSD must be dug into the soil and anchored. If it is not, water will flow under the base of the check.
- Follow prescribed TSD spacing guidelines. If spacing guidelines are exceeded, erosion will occur between the ditch checks.
- Do not allow water to flow around the TSD. Make sure that the dike extends far enough so that the bottoms of the end dikes are higher than the top of the lowest center dike.

## **INSPECTION & MAINTENANCE**

TSDs should be inspected every 7 days and within 24 hours of a rainfall of 10 millimeters or more. The following is a list of questions that should be addressed during each inspection:

- ***Does water flow around the TSDs?***  
This is usually caused by insufficient dike length. If this occurs, extend the check to where the bottoms of the end dikes are higher than the top of the lowest center dike.
- ***Does water flow under the TSDs?***  
This is usually caused by not properly anchoring the TSD. Make sure that the upstream apron is trenched in and that an adequate number of staples have been used.
- ***Does water flow through spaces between abutting TSDs?***  
This is usually caused poor connections between adjoining dikes. Dikes should be connected at their ends with the connecting sleeves. If spaces exist between adjoining dikes, they should be reconnected properly.
- ***Does sediment need to be removed from behind the TSDs?***  
Sediment accumulated behind the TSDs should be removed when it reaches one-half of the dike height. Allowing too much sediment to accumulate behind a TSD check drastically reduces its effectiveness. One high-intensity rainfall can dislodge enough sediment from surrounding slopes to completely fill the space behind the ditch check. This is why it is extremely important to inspect ditch checks within 24 hours of a large rainfall.

When removing sediment from behind a TSD with a bulldozer or backhoe, make sure not to hook the upstream apron with the blade. This will damage the check and it will have to be replaced. ☑

## PURPOSE & OPERATION

Rock ditch checks operate by intercepting and ponding sediment-laden runoff. Ponding the water dissipates the energy of any incoming flow and allows a large portion of the suspended sediment to settle out. Water exits the ditch check by flowing over its crest. Rock ditch checks are ideal for ditches that will eventually have a riprap lining. Upon completion of the project, the rock ditch checks can be spread out to form the riprap channel lining.

## DESIGN

### *Material Specification*

- Rock ditch checks should be constructed of stone that complies with section 1116.02(d) of KDOT's Standard Specifications.

### *Placement*

- Rock ditch checks should be placed **perpendicular** to the flowline of the ditch.
- Rock ditches must be designed so that water can flow over them, not around them. The ditch check should extend far enough so that the ground level at the ends of the check is higher than the low point on the crest of the check.
- Rock ditch checks are best located in ditches that will eventually be lined with riprap, so that the rock won't have to be removed at the completion of construction.


The following table provides check spacing for a given ditch grade:

Ditch Check Spacing	
<i>Ditch grade (%)</i>	<i>Check Spacing (meters)</i>
5.0	18
6.0	15
7.0	13
8.0	11
9.0	10
10.0	9

## INSTALLATION


### *Proper installation method*

- Using approved stone, construct a rock ditch check perpendicular to the ditch flowline. The ditch check should be 460 to 600 millimeters high and have side slopes no steeper than 1:1. The rock ditch check must be constructed so that water can **flow over the top**—not around the ends (i.e., the ground level at the ends of the check must be higher than the low point on the crest of the check).

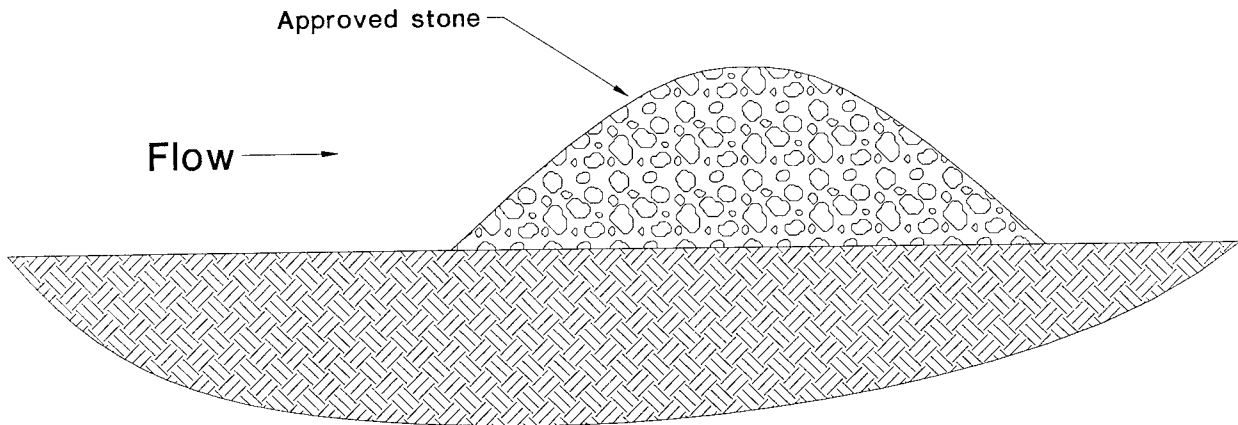

**Figure 4-1: Detail of rock ditch check installation**

Note: Point A must be higher than point B so that water flows over the rock check and not around it.

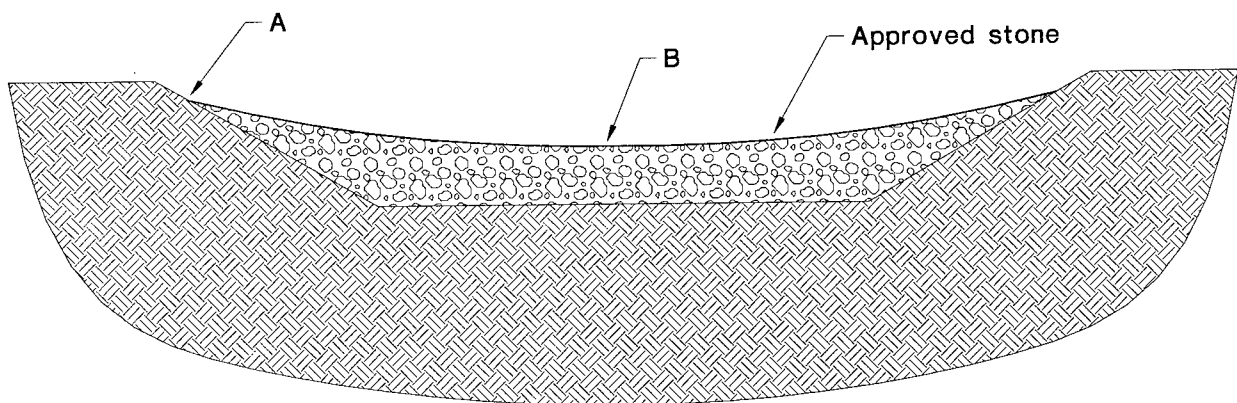

**Figure 4-2: Installation of rock ditch checks**

***List of common placement/installation mistakes to avoid***

- Follow prescribed ditch check spacing guidelines. If spacing guidelines are exceeded, erosion will occur between the ditch checks.
- Do not allow water to flow around the ditch check. Make sure that the ditch check is long enough so that the ground level at the ends of the check is higher than the low point on the crest of the check.

**INSPECTION & MAINTENANCE**

Rock ditch checks should be inspected every 7 days and within 24 hours of a rainfall of 10 millimeters or more. The following is a list of questions that should be addressed during each inspection:

- ***Does water flow around the ditch check?***

This is usually caused by insufficient ditch check length. If this occurs, extend the check a sufficient length so that the ground level at the ends of the check is higher than the low point on the crest of the check.

- ***Have high-velocity flows displaced any stones from the check?***

Sometimes high-velocity flows can carry away portions of a rock ditch check. After a large rainstorm, inspect the rock ditch check for any displaced stones. If a large portion of a rock ditch check has washed away, fill in the void with new stone immediately.

- ***Does sediment need to be removed from behind the ditch check?***

Sediment accumulated behind the ditch check should be removed when it reaches one-half of the original exposed height of the rock ditch check. Allowing too much sediment to accumulate behind a ditch check drastically reduces its effectiveness. One high-intensity rainfall can dislodge enough sediment from surrounding slopes to completely fill the space behind the ditch check. This is why it is extremely important to inspect ditch checks within 24 hours of a large rainfall.

The easiest way to remove sediment from behind a rock ditch check is with a bulldozer or backhoe. ☑

### PURPOSE & OPERATION

Bale slope barriers operate by intercepting and ponding sediment-laden slope runoff. Ponding the water dissipates the energy of the incoming flow and allows much of the suspended sediment to settle out. Water exits the bale slope barrier by flowing over the bales.

### DESIGN

#### *Material Specification*

- Bale slope barriers may be constructed of wheat straw, oat straw, prairie hay, or brome grass hay that is free of weeds declared noxious by the Kansas State Board of Agriculture.
- The stakes used to anchor the bales should be a hardwood material with the following minimum dimensions: 50 millimeters square (nominal) by 1.2 meters long.
- Twine should be used to bind bales. The use of wire binding is prohibited because it does not biodegrade readily.


#### *Placement*

- A slope barrier should be used at the toe of a slope when a ditch does not exist. The slope barrier should be placed on nearly level ground 1.5 to 3.0 meters away from the toe of a slope. The barrier is placed away from the toe of the slope to provide adequate storage for settling out sediment.
- When practicable, bale slope barriers should be placed along contours to avoid a concentration of flow.
- Bale slope barriers can also be placed along right-of-way fence lines to keep sediment from crossing onto adjacent property. When placed in this manner, the slope barrier will not likely follow contours.

### INSTALLATION

#### *Proper installation method*

- Excavate a trench the length of the planned slope barrier that is 150 millimeters deep and a bale's width wide. Make sure that the trench is excavated along a single contour. **When practicable, slope barriers should be placed along contours to avoid a concentration of flow.** Place the soil on the upslope side of the trench for later use.
- Place the bales in the trench, making sure that they are butted tightly. Two stakes should be driven through each bale along the centerline of the ditch check, approximately 150 to 200 millimeters in from the bale ends. Stakes should be driven **at least** 460 millimeters into the ground.
- Once all the bales have been installed and anchored, place the excavated soil against the upslope side of the check and compact it. The compacted soil should be no more than 75 to 100 millimeters deep.

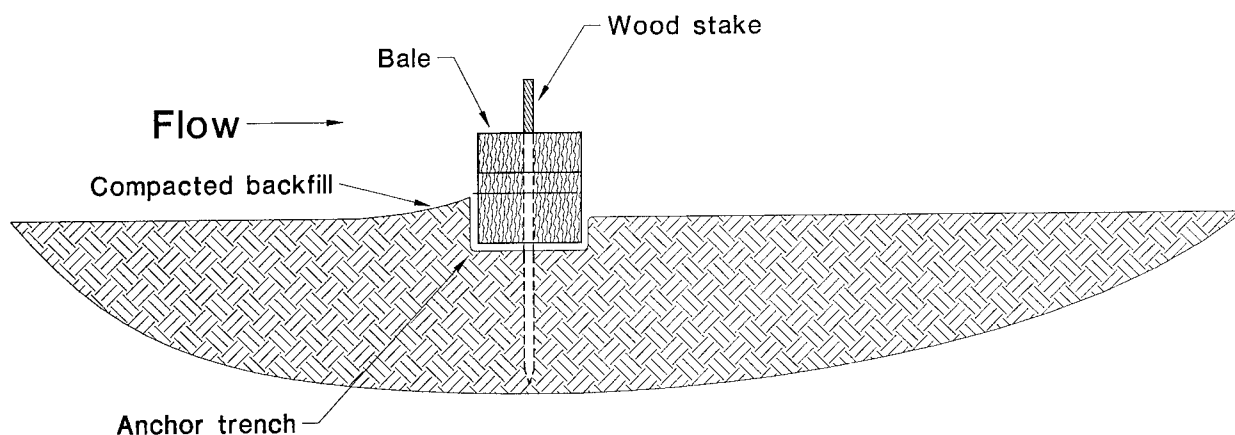

**Figure 5-1: Detail of bale slope barrier installation**

***List of common placement/installation mistakes to avoid***

- When practicable, do not place bale slope barriers across contours. **Slope barriers should be placed along contours to avoid a concentration of flow.** Concentrated flow over a slope barrier creates a scour hole on the downslope side of the barrier. The scour hole eventually undermines the bales and the barrier fails.
- Do not place bale slope barriers in areas with shallow soils underlain by rock. If the barrier is not anchored sufficiently, it will wash out.
- Bale slope barriers must be dug into the ground. Bales at ground level do not work because they allow water to flow under the barrier.

## **INSPECTION & MAINTENANCE**

Bale slope barriers should be inspected every 7 days and within 24 hours of a rainfall of 10 millimeters or more. The following is a list of questions that should be addressed during each inspection:

- ***Are there any points along the slope barrier where water is concentrating?***  
When slope barriers are not placed along contours, water concentrates at low points of the slope barrier. This concentrated flow usually causes a failure of the slope barrier. Even if the barrier does not fail, the concentration of flow drastically reduces the overall storage capacity of the slope barrier. The only solution to this problem is reinstalling the slope barrier (or sections of it) so that it is level.
- ***Does water flow under the slope barrier?***  
This is usually caused by not trenching in the bales deep enough (at least 150 millimeters) or by insufficient compaction of soil against the upslope side of the check. If the problem is insufficient compaction, add more soil to the upslope side of the check and recompact. If the problem is improperly trenched bales, the entire slope barrier should be removed and a new one installed using the proper trench depth.
- ***Does water flow through spaces between abutting bales?***  
This is usually caused by not butting the bales tight enough during initial installation. Stuffing loose bale material between the bales to fill up the space can usually solve this

problem.

- ***Are any bales dislodged?***

Check to see if any bales have become dislodged from their original position. Dislodged bales should be repositioned and restaked if they are still reusable—otherwise, replace them.

- ***Are bales decomposing due to age and/or water damage?***

Under normal conditions, the maximum useful life of a bale is normally 3 months (but may be longer during prolonged dry periods). Inspect the bales for signs of decomposition and replace as necessary.

- ***Does sediment need to be removed from behind the slope barrier?***

Sediment accumulated behind the slope barrier should be removed when it reaches one-half of the original exposed height of the bales. Allowing too much sediment to accumulate behind a slope barrier drastically reduces its effectiveness. One high-intensity rainfall can dislodge enough sediment from surrounding slopes to completely fill up the space behind the slope barrier. This is why it is extremely important to inspect slope barriers within 24 hours of a large rainfall.

When removing sediment from behind a bale slope barrier with a bulldozer or backhoe, take care not to undermine the entrenched bales. ☑



### PURPOSE & OPERATION

Silt-fence slope barriers operate by intercepting and ponding sediment-laden slope runoff. Ponding the water reduces the velocity of the incoming flow and allows most of the suspended sediment to settle out. Water exits the silt-fence slope barrier by percolating through the silt fence.

### DESIGN

#### *Material Specification*

- Silt-fence fabric should conform to the AASHTO M288 96 silt fence specification.
- The posts used to support the silt-fence fabric should be a hardwood material with the following minimum dimensions: 50 millimeters square (nominal) by 1.2 meters long.
- Silt-fence fabric should be attached to the wooden posts with staples, wire, zip ties, or nails.


#### *Placement*

- A slope barrier should be used at the toe of a slope when a ditch does not exist. The slope barrier should be placed on nearly level ground 1.5 to 3.0 meters away from the toe of a slope. The barrier is placed away from the toe of the slope to provide adequate storage for settling out sediment.
- When practicable, silt-fence slope barriers should be placed along contours to avoid a concentration of flow.
- Silt-fence slope barriers can also be placed along right-of-way fence lines to keep sediment from crossing onto adjacent property. When placed in this manner, the slope barrier will not likely follow contours.

### INSTALLATION

#### *Proper installation method*

- Excavate a trench the length of the planned slope barrier that is 150 millimeters deep by 100 millimeters wide. Make sure that the trench is excavated along a single contour. **When practicable, slope barriers should be placed along contours to avoid a concentration of flow.** Place the soil on the upslope side of the trench for later use.
- Roll out a continuous length of silt-fence fabric on the downslope side of the trench. Place the edge of the fabric in the trench starting at the top upslope edge. Line all three sides of the trench with the fabric. Backfill over the fabric in the trench with the excavated soil and compact. After filling the trench, approximately 600 to 900 millimeters of silt-fence fabric should remain exposed.
- Lay the exposed silt fence upslope of the trench to clear an area for driving in the posts. Just downslope of the trench, drive posts into the ground to a depth of at least 600 millimeters inches. Place posts no more than 1.2 meters apart.
- Attach the silt fence to the anchored post with staples, wire, zip ties, or nails.

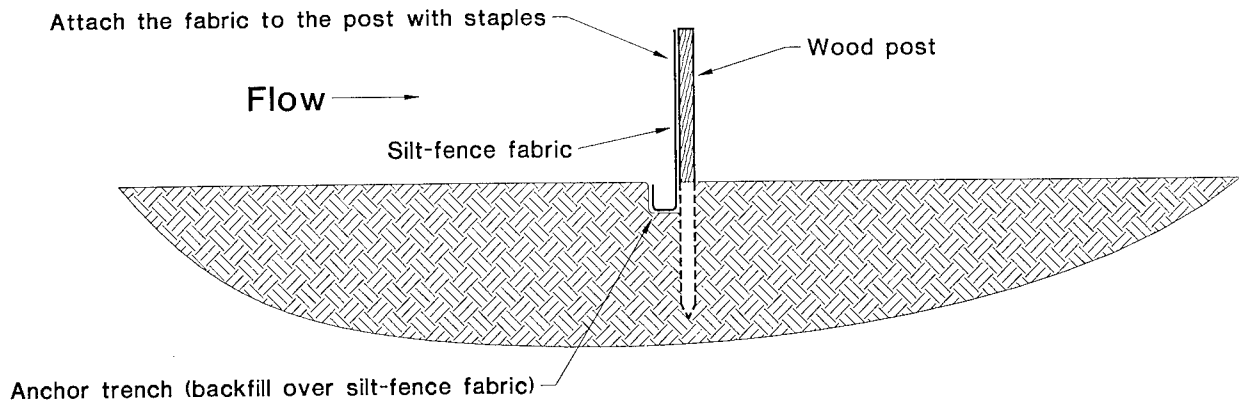

**Figure 6-1: Detail of silt-fence slope barrier installation**

***List of common placement/installation mistakes to avoid***

- When practicable, do not place silt-fence slope barriers across contours. **Slope barriers should be placed along contours to avoid a concentration of flow.** When the flow concentrates, it overtops the barrier and the silt-fence slope barrier quickly deteriorates.
- Do not place silt-fence posts on the upslope side of the silt-fence fabric. In this configuration, the force of the water is not restricted by the posts, but only by the staples (wire, zip ties, nails, etc.). The silt fence will rip and fail.
- Do not place silt fence slope barriers in areas with shallow soils underlain by rock. If the barrier is not sufficiently anchored, it will wash out.
- Silt-fence slope barriers must be dug into the ground—silt fence at ground level does not work because water will flow underneath.

## INSPECTION & MAINTENANCE

Silt-fence slope barriers should be inspected every 7 days and within 24 hours of a rainfall of 10 millimeters or more. The following is a list of questions that should be addressed during each inspection:

- ***Are there any points along the slope barrier where water is concentrating?***  
When slope barriers are not placed along contours, water concentrates at low points of the slope barrier. This concentrated flow usually causes a failure of the slope barrier. Even if the barrier does not fail, the concentration of flow drastically reduces the overall storage capacity of the slope barrier. The only solution to this problem is reinstalling the slope barrier (or sections of it) so that it is level.
- ***Does water flow under the slope barrier?***  
This can be caused by posts that are too far apart, a trench that is too shallow, or an improper burial procedure. Posts should be no more than 1.2 meters apart. The trench should be at least 100 millimeters wide by 150 millimeters deep. The bottom edge of the silt fence should be anchored securely by backfilling over the fabric in the trench with the excavated soil and then compacting. If these guidelines have not been met, the silt-fence slope barrier should be re-installed or the deficiencies should be remedied.

- ***Does the silt-fence sag excessively?***

Sagging silt fence is caused by excessive post spacing and/or overtopping of the silt fence. Silt-fence posts should be no more than 1.2 meters apart. If the post spacing exceeds 1.2 meters, additional posts should be added to decrease spacing between posts. Water should flow through a silt-fence slope barrier—not over it. Silt-fence installations quickly deteriorate when water overtops them. If a silt-fence slope barrier is regularly overtopped, it has probably been placed in a location that receives flows beyond its intended capacity. If this is the case, discontinue the use of silt-fence in this area and try something different (e.g.—bale slope barriers).

- ***Has the silt fence torn or become detached from the posts?***

Silt-fence can be torn by the force of ponded water, or by winds that rip the silt-fence fabric away from the posts. If a silt fence develops tears for any reason, it should be replaced.

- ***Does sediment need to be removed from behind the slope barrier?***

Sediment accumulated behind the slope barrier should be removed when it reaches one-half of the original exposed height of the silt fence. Allowing too much sediment to accumulate behind a slope barrier drastically reduces its effectiveness. One high-intensity rainfall can dislodge enough sediment from surrounding slopes to completely fill up the space behind the slope barrier. This is why it is extremely important to inspect slope barriers within 24 hours of a large rainfall.

When removing sediment from behind a silt-fence slope barrier with a bulldozer or backhoe, take care not to undermine the entrenched silt fence. ☑

### PURPOSE & OPERATION

Bale drop-inlet barriers operate by intercepting and ponding sediment-laden runoff. Ponding the water reduces the velocity of the incoming flow and allows most of the suspended sediment to settle out. When the pond height reached the top of the barrier, water flows over the bales and into the drop inlet.

### DESIGN

#### *Material Specification*

- Bale drop-inlet barriers should be constructed of wheat straw, oat straw, prairie hay, or brome grass hay that is free of weeds declared noxious by the Kansas State Board of Agriculture.
- The stakes used to anchor the bales should be a hardwood material with the following minimum dimensions: 50 millimeters square (nominal) by 1.2 meters long.
- Twine should be used to bind bales. The use of wire binding is prohibited because it does not biodegrade readily.


#### *Placement*

- Bale drop-inlet barriers should be placed directly around the perimeter of a drop inlet.
- When a bale drop-inlet barrier is located near an inlet that has steep approach slopes, the storage capacity behind the barrier is drastically reduced. Timely removal of sediment must occur for a barrier to operate properly in this location.


### INSTALLATION

#### *Proper installation method*

- Excavate a trench around the perimeter of the drop inlet that is at least 150 millimeters deep by a bale's width wide.
- Place the bales in the trench, making sure that they are butted tightly. Some bales may need to be shortened to fit into the trench around the drop inlet. Two stakes should be driven through each bale, approximately 150 to 200 millimeters in from the bale ends. Stakes should be driven **at least** 460 millimeters into the ground.
- Once all the bales have been installed and anchored, place the excavated soil against the receiving side of the barrier and compact it. The compacted soil should be no more than 75 to 100 millimeters deep.
- **Note:** When a bale drop-inlet barrier is placed in a shallow median ditch, make sure that the top of the barrier is not higher than the paved road. In this configuration, water may spread onto the roadway causing a hazardous condition.

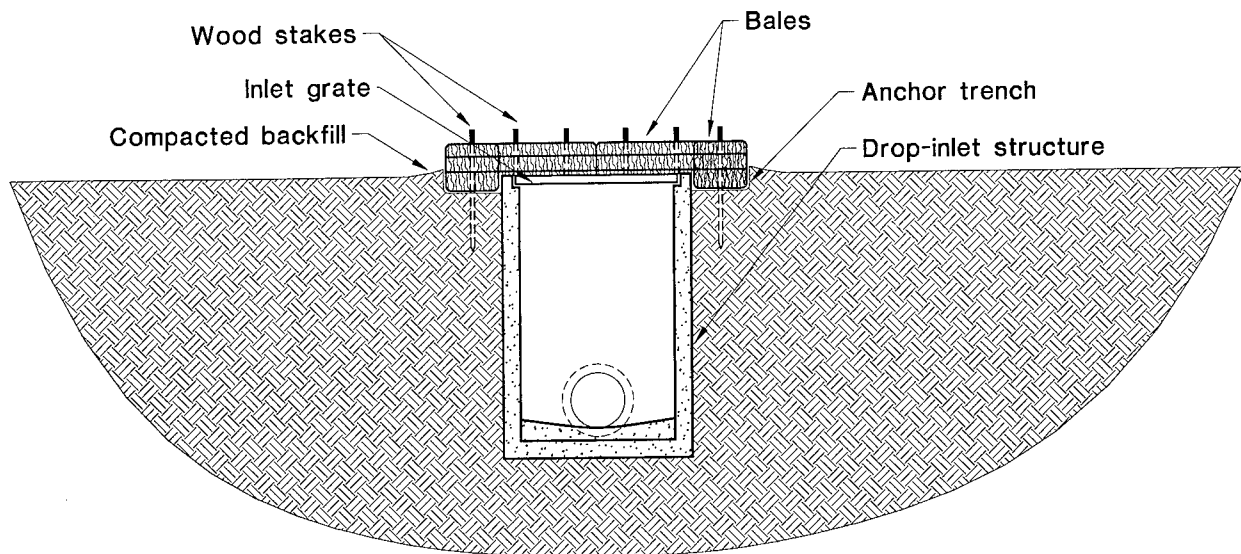

**Figure 7-1: Detail of bale drop-inlet barrier installation**

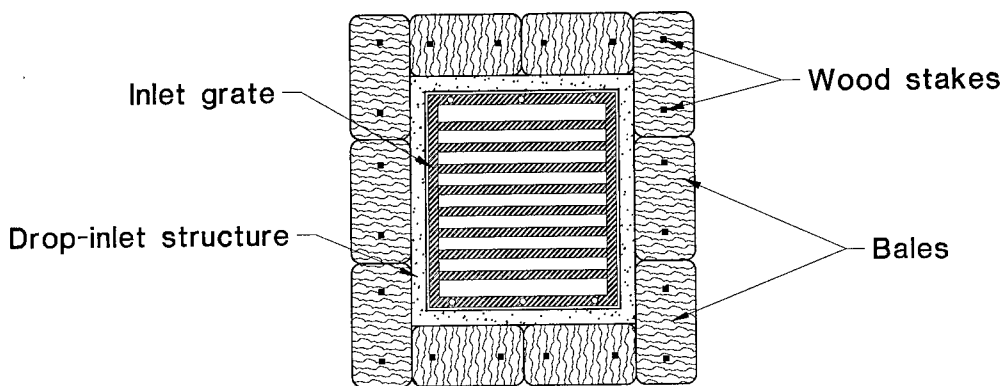

**Figure 7-2: Plan view of bale drop-inlet barrier installation**

***List of common placement/installation mistakes to avoid***

- Bales should be placed directly against the perimeter of the drop inlet. This allows overtopping water to flow directly into the inlet instead of onto nearby soil causing scour.
- Bale drop-inlet barriers must be dug into the ground. Bales at ground level do not work because they allow water to flow under the barrier.

**INSPECTION & MAINTENANCE**

Bale drop-inlet barriers should be inspected every 7 days and within 24 hours of a rainfall 10 millimeters or more. The following is a list of questions that should be addressed during each inspection:

- ***Does water flow under the drop-inlet barrier?***

This is usually caused by not trenching in the bales deep enough (at least 150 millimeters) or insufficient compaction of soil around the barrier. If the problem is insufficient compaction, add more soil around the base of the barrier and recompact. If the problem is improperly trenched bales, the drop-inlet barrier should be removed and a new one installed using the proper trench depth.

- ***Does water flow through spaces between abutting bales?***

This is usually caused by not butting the bales tight enough during initial installation. Stuffing loose bale material between the bales to fill up the space can usually solve this problem.

- ***Are any bales dislodged?***

Check to see if any bales have become dislodged from their original position. Dislodged bales should be repositioned and restaked if they are still reusable—otherwise, replace them.

A dislodged bale should be repaired immediately because it has the potential to create bigger problem: **flooding**. If a bale falls over onto a drop inlet during a storm, the inlet can become blocked, causing flooding of the roadway.

- ***Are bales decomposing due to age and/or water damage?***

Under normal conditions, the maximum useful life of a bale is normally 3 months (but may be longer during prolonged dry periods). Inspect the bales for signs of decomposition and replace as necessary.

- ***Does sediment need to be removed from behind the drop-inlet barrier?***

Sediment accumulated behind the drop-inlet barrier should be removed when it reaches one-half of the original exposed height of the bales. Allowing too much sediment to accumulate behind a drop-inlet barrier drastically reduces its effectiveness. One high-intensity rainfall can dislodge enough sediment from the drainage basin to completely fill the space behind the drop-inlet barrier. This is why it is extremely important to inspect drop-inlet barriers within 24 hours of a large rainfall.

When removing sediment from behind a bale drop-inlet barrier with a bulldozer or backhoe, take care not to undermine the entrenched bales. ☑

### PURPOSE & OPERATION

Silt-fence drop-inlet barriers works just like a ditch check or a slope barrier: the silt fence intercepts, ponds, and filters sediment-laden runoff. Ponding the water reduces the velocity of the incoming flow and allows most of the suspended sediment to settle out. As the ponded water percolates through the silt-fence fabric, much of the remaining suspended sediment is filtered out.

### DESIGN

#### *Material Specification*

- Silt-fence fabric should conform to the AASHTO M288 96 silt fence specification.
- The wire or polymeric mesh backing used to help support the silt-fence fabric should conform to the AASHTO M288 96 silt fence specification.
- The posts used to support the silt-fence fabric should be a hardwood material with the following minimum dimensions: 50 millimeters square (nominal) by 1.2 meters long.
- The material used to frame the tops of the posts should be 50 millimeter by 100 millimeter boards.
- Silt-fence fabric and support backing should be attached to the wooden posts and frame with staples, wire, zip ties, or nails.

#### *Placement*

- Place a silt-fence drop-inlet barrier in a location where it is unlikely to be overtopped. Water should flow through silt-fence, not over it. Silt-fence drop-inlet barriers often fail when repeatedly overtopped.
- When used as a drop-inlet barrier, silt-fence fabric and posts must be supported at the top by a wooden frame.
- When a silt-fence drop-inlet barrier is located near an inlet that has steep approach slopes, the storage capacity behind the barrier is drastically reduced. Timely removal of sediment must occur for a barrier to operate properly in this location.

### INSTALLATION

#### *Proper installation method*

- Excavate a trench around the perimeter of the drop inlet that is **at least** 150 millimeters deep by 100 millimeters wide.
- Drive posts to a depth of at least 600 millimeters around the perimeter of the drop inlet. The distance between posts should be 1.2 meters or less. If the distance between two adjacent corner posts is more than 1.2 meters, add another post(s) between them.
- Connect the tops of all the posts with a wooden frame made of 50 millimeter by 100 millimeter boards. Use nails or screws for fastening.
- Attach the wire or polymeric-mesh backing to the **outside** of the post/frame structure with staples, wire, zip ties, or nails.
- Roll out a continuous length of silt-fence fabric long enough to wrap around the perimeter of the drop inlet. Add more length for overlapping the fabric joint. Place the edge of the

fabric in the trench, starting at the outside edge of the trench. Line all three sides of the trench with the fabric. Backfill over the fabric in the trench with the excavated soil and compact. After filling the trench, approximately 600 to 900 millimeters of silt-fence fabric should remain exposed.

- Attach the silt fence to the **outside** of the post/frame structure with staples, wire, zip ties, or nails. The joint should be overlapped to the next post.
- **Note:** When a silt-fence drop-inlet barrier is placed in a shallow median ditch, make sure that the top of the barrier is not higher than the paved road. In this configuration, water may spread onto the roadway causing a hazardous condition.

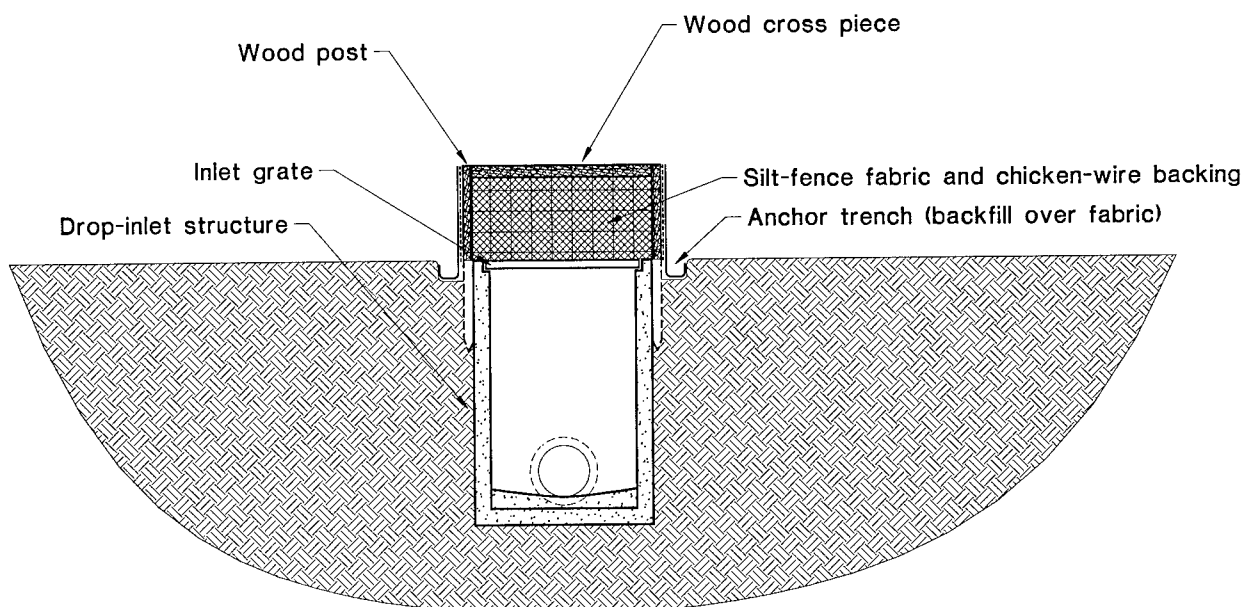


Figure 8-1: Detail of silt-fence drop-inlet barrier installation

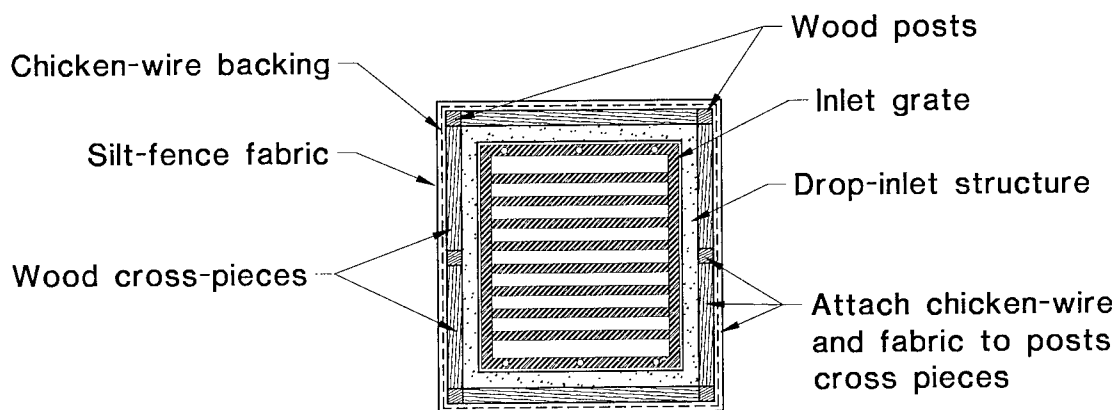


Figure 8-2: Plan view of silt-fence drop-inlet barrier installation



### ***List of common placement/installation mistakes to avoid***

- Water should flow through a silt-fence drop-inlet barrier—not over it. Place a silt-fence drop-inlet barrier in a location where it is unlikely to be overtopped. Silt-fence drop-inlet barriers often fail when repeatedly overtopped.
- Do not place posts on the outside of the silt-fence drop-inlet barrier. In this configuration, the force of the water is not resisted by the posts, but only by the staples (wire, zip-ties, nails, etc.). The silt fence will rip and fail.
- Do not install silt-fence drop-inlet barriers without framing the top of the posts. The corner posts around drop inlets are stressed in two directions whereas a normal silt fence is only stressed in one direction. This added stress requires more support.

## **INSPECTION & MAINTENANCE**

Silt-fence drop-inlet barriers should be inspected every 7 days and within 24 hours of a rainfall of 10 millimeters or more. The following is a list of questions that should be addressed during each inspection:

- ***Does water flow under the silt fence?***

This can be caused by posts that are too far apart, a trench that is too shallow, or an improper burial procedure. Posts should be no more than 1.2 meters apart. The trench should be at least 100 millimeters wide by 150 millimeters deep. The bottom edge of the silt fence should be anchored securely by backfilling over the fabric in the trench with the excavated soil and then compacting. If these guidelines have not been met, the silt-fence drop-inlet barrier should be re-installed or the deficiencies should be remedied.

- ***Does the silt-fence sag excessively?***

Sagging silt fence is caused by excessive post spacing or the lack of a frame connecting the posts. Silt-fence posts should be no more than 1.2 meters apart. If the post spacing exceeds 1.2 meters, additional posts should be added to decrease spacing between posts. If no post frame exists, one should be added.

A sagging silt fence should be repaired immediately because it has the potential to create bigger problem: **flooding**. If a silt fence falls over onto a drop inlet during a storm, the inlet can become blocked, causing flooding of the roadway.

- ***Has the silt fence torn or become detached from the posts?***

Silt-fence can be torn by the force of ponded water, or by winds that rip the silt-fence fabric away from the posts. If a silt fence develops tears for any reason, it should be replaced.

- ***Does sediment need to be removed from behind the drop-inlet barrier?***

Sediment accumulated behind the drop-inlet barrier should be removed when it reaches one-half of the original exposed height of the silt fence. Allowing too much sediment to accumulate behind a drop-inlet barrier drastically reduces its effectiveness. One high-intensity rainfall can dislodge enough sediment from the drainage basin to completely fill the space behind the drop-inlet barrier. This is why it is extremely important to inspect drop-inlet barriers within 24 hours of a large rainfall.

When removing sediment from behind a silt-fence drop-inlet barrier with a bulldozer or backhoe, take care not to undermine the entrenched silt fence. ☑

## SECTION 9     Triangular Silt Dike™ Drop-Inlet Barriers

---

### PURPOSE & OPERATION

Triangular Silt Dike (TSD) drop-inlet barriers operate by intercepting and ponding sediment-laden runoff. Ponding the water reduces the velocity of the incoming flow and allows most of the suspended sediment to settle out. When the pond height reached the top of the barrier, water flows over the TSDs and into the drop inlet.

### DESIGN

#### *Material Specification*

- Triangular Silt Dikes™
- The metal landscape staples used to anchor the TSDs should be at least 150 millimeters to 200 millimeters long.

#### *Placement*


- TSD drop-inlet barriers should be placed directly around the perimeter of a drop inlet.
- When a TSD drop-inlet barrier is located near an inlet that has steep approach slopes, the storage capacity behind the barrier is drastically reduced. Timely removal of sediment must occur for a barrier to operate properly in this location.

### INSTALLATION


**Note:** The orientation of the TSD when installed as a drop-inlet barrier differs from installation as a ditch check.

#### *Proper installation method*

- For a drop-inlet barrier installation, orient the TSD so that the side bordering the drop inlet is vertical. Orient the TSD aprons so that the shorter of the two aprons lies beneath the longer one. Neither apron should be under the foam portion of the TSD.
- Place two full sections (approximately 2.1 meters long each) of TSD against opposite sides of the drop inlet. These sections should extend beyond the edges of the drop inlet—**do not cut** these to fit. Excavate trenches that are at least 100 millimeters deep by 100 millimeters wide near the ends of the TSD apron so that the outer 200 to 260 millimeters of the apron can be buried. Lay the outer 200 to 260 millimeters of apron into the trench and anchor it with 150-millimeter to 200-millimeter landscape staples on 460-millimeter centers. Backfill the trench with the excavated soil and compact. Anchor the remainder of the apron with a row of 150-millimeter to 200-millimeter landscape staples on 460-millimeter centers along the seam of the TSD.
- In the spaces where the TSDs extend beyond the edges of the drop-inlet, cut new TSDs to fit. Make sure that a tight fit is achieved between the cut TSDs and the existing TSDs. These cut sections should be oriented and anchored in the same manner as the initial sections.
- **Note:** When a TSD drop-inlet barrier is placed in a shallow median ditch, make sure that the top of the barrier is not higher than the paved road. In this configuration, water may spread onto the roadway causing a hazardous condition.

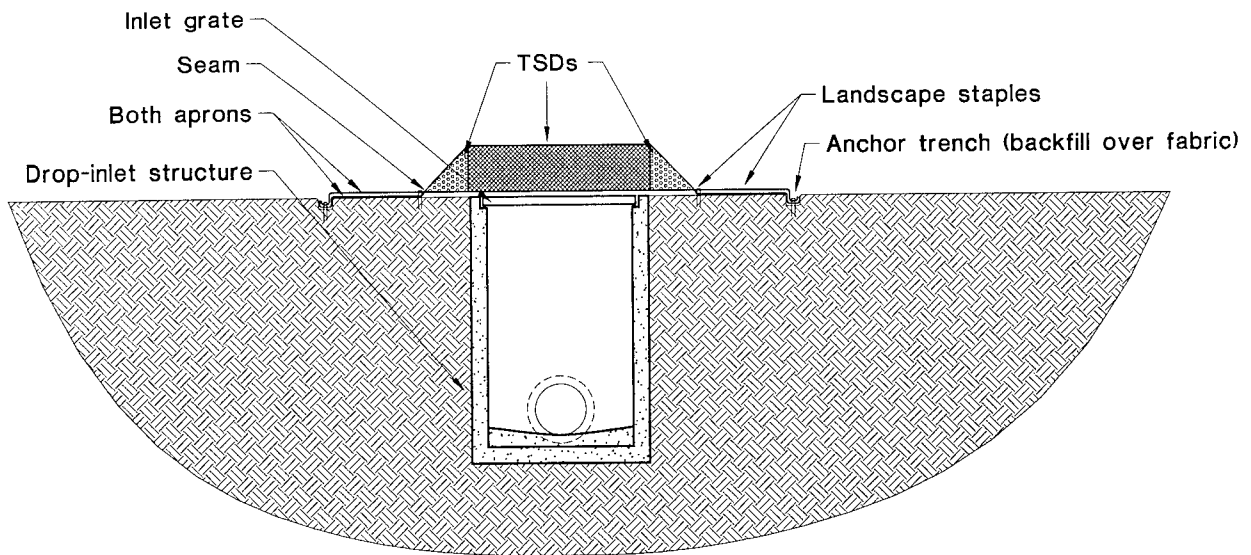

**Figure 9-1: Detail of TSD drop-inlet barrier installation**

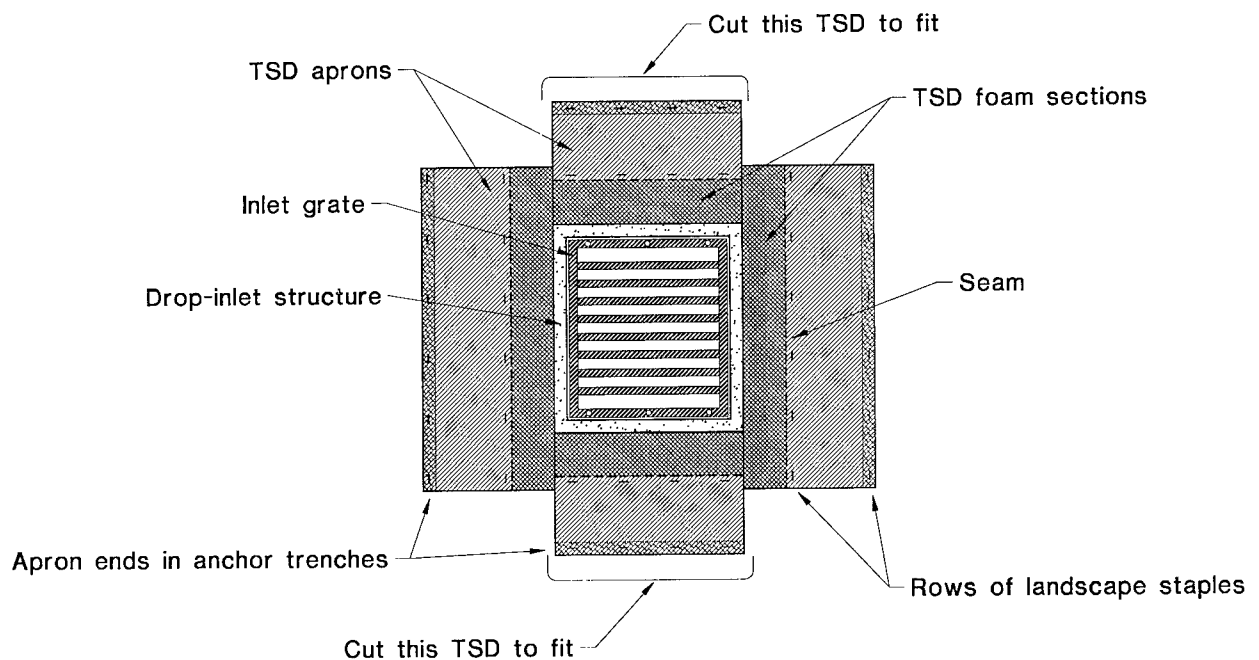

**Figure 9-2: Plan view of TSD drop-inlet barrier installation**

***List of common placement/installation mistakes to avoid***

- TSDs should be placed directly against the perimeter of the drop inlet. This allows overtopping water to flow directly into the inlet instead of onto nearby soil causing scour.
- Make sure to orient the TSD properly. The side in contact with the drop inlet should be vertical and the shorter apron should lie beneath the longer one.
- If the receiving apron of a TSD is not dug into the ground, water will flow underneath.

## INSPECTION & MAINTENANCE

TSD drop-inlet barriers should be inspected every 7 days and within 24 hours of a rainfall of 10 millimeters or more. The following is a list of questions that should be addressed during each inspection:

- ***Does water flow under the TSDs?***  
This is usually caused by not properly anchoring the TSD. Make sure that the receiving apron is trenched in and that an adequate number of staples have been used.
- ***Does water flow through spaces between abutting TSDs?***  
This is usually caused by incorrect sizing of the cut sections. If the cut sections are too small, re-cut new sections so that they fit properly
- ***Does sediment need to be removed from behind the TSDs?***  
Sediment accumulated behind the TSDs should be removed when it reaches one-half of the dike height. Allowing too much sediment to accumulate behind a TSD barrier drastically reduces its effectiveness. One high-intensity rainfall can dislodge enough sediment from surrounding slopes to completely fill the space behind the drop-inlet barrier. This is why it is extremely important to inspect drop-inlet barriers within 24 hours of a large rainfall.

When removing sediment from behind a TSD with a bulldozer or backhoe, make sure not to hook the receiving apron with the blade. This will damage the barrier and it will have to be replaced. ☑

## **SECTION 10**

## **Temporary Erosion-Control Blankets**

---

### **PURPOSE & OPERATION**

Erosion-control blankets are used to help limit erosion and establish vegetation on slopes and in ditches where conventional seeding and/or structural methods would be inadequate. By reducing the negative effects of rainfall impact and runoff, erosion-control blankets prevent erosion and provide slopes and ditches with a temporary, stable environment for seed to germinate.

Temporary erosion-control blankets are constructed of a variety of materials. These include straw, wood excelsior, coconut, or some combination thereof. These materials are then usually stitched or glued to some type of synthetic or natural fiber netting. This netting is either biodegradable or photodegradable (broken down by light).

### **PLACEMENT & INSTALLATION**

To determine which project areas require the use of temporary erosion-control blankets, consult the KDOT Road Design Manual. Installation details vary between products. General guidelines for the installation of erosion-control blankets can be found in the KDOT Standard Specifications, Section 904, Erosion and Pollution Control and the appropriate Standard Drawings.

**PURPOSE & OPERATION**

Temporary seeding is by far the most efficient and cost-effective method for controlling on-site erosion. The key to controlling erosion with temporary seeding is the timeliness of the application. Temporary seeding should be initiated within 14 days after grading activities have temporarily or permanently ceased on a portion of the project site. On-site erosion and off-site sedimentation will continue to occur as long as a section of exposed earth remains open.

**PLACEMENT & INSTALLATION**

Specific project plans outline the amount and type of seed to be used. Consult the Kansas Department of Transportation's Standard Specifications, Section 904, Erosion and Pollution Control and the appropriate Standard Drawings for information on areas of the project that should be seeded, when seeding should take place, soil preparation, and mulching requirements.

## ➡ ADDITIONAL RESOURCES

---

If you wish to learn more about temporary erosion control and the NPDES permitting process, the following resources may be helpful.

### TEMPORARY EROSION CONTROL

- ***Protecting Water Quality.*** A copy of this publication can be obtained by contacting Betty Keehart, Missouri Department of Natural Resources, at (573) 751-7144.
- ***Best Management Practices for Erosion and Sediment Control.*** Report No. FHWA-FLP-94-005. A copy of this publication can be obtained from FHWA at:

U.S. Department of Transportation  
Federal Highway Administration  
Federal Lands Highway Program  
Washington, DC 20590

- ***Volume III: AASHTO Guidelines for Erosion and Sediment Control in Highway Construction.***

### NPDES PERMITS

- ***KDHE National Pollutant Discharge Elimination System Stormwater Discharge Permit Information Packet.*** A copy of this packet can be obtained from KDHE at:

Kansas Department of Health and Environment  
Bureau of Water  
Building 283, Forbes Field  
Topeka, KS 66620  
(785) 296-5557

- Federal Register: ***September 9, 1992 - Final NPDES General Permits for Storm Water Discharges From Construction Sites; Permit Language*** (57 FR 41209).
- Federal Register: ***September 9, 1992 - Final NPDES General Permits for Storm Water Discharges From Construction Sites; Fact Sheet*** (57 FR 41176).